

# CD/DVD Player

Reference Guide\_\_\_\_\_ GB

راهنمای مرجع\_\_\_\_\_ PR

DVP-SR370



# WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.


## Precautions

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

## Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the set due to lightning and power-line surges.

## Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs labelled with an identical region cord or .

## Copyrights, trademarks and software license information


- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.  
This product contains technology subject to certain intellectual property rights of Microsoft.  
Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.
- All other trademarks are trademarks of their respective owners.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

# Control Menu Display

## Press DISPLAY.

To change the Control Menu display, press DISPLAY again.

The available items differ depending on the disc/file or the situation.

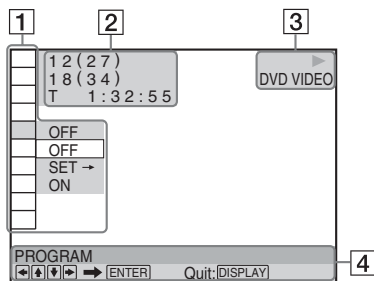

- 1 Control Menu items: "Menu list"  
Selected item options
- 2 Number of titles  
Number of chapters  
Playing time
- 3 Playback status  
Media type
- 4 Selected Control Menu item  
Operation message

## Menu list

- TITLE/SCENE/TRACK
- CHAPTER/INDEX
- TRACK
- TIME/TEXT
- DISC/USB
- TOP MENU/MENU
- ORIGINAL/PLAY LIST
- PROGRAM

Select "SET →," then press ENTER and select the title (T), chapter (C), or track (T) you want to programme, and press ENTER. Press .

- SHUFFLE
- REPEAT
- A-B REPEAT

Select "SET →," then press ENTER. Select point A and point B by pressing ENTER.

### PARENTAL CONTROL

Playback of some DVD VIDEOS can be limited according to a predetermined level such as the

age of the users. Scenes may be blocked or replaced with different scenes.

**PLAYER** →: Enter your 4-digit password, then press ENTER. Select the level in "LEVEL." The lower the value, the stricter the limitation. Select an area in "STANDARD." When you select "OTHERS →," select and enter a standard code. "PARENTAL CONTROL AREA CODE LIST"

**PASSWORD** →: Enter a 4-digit password. If you forget your password, enter "199703" in the password box, press ENTER, and then enter a new 4-digit password.

### SETUP

You can adjust various settings when the player is in stop mode.

**QUICK:** Adjusts the basic settings.

**CUSTOM:** "CUSTOM menu"

**RESET:** Returns the settings in "SETUP" to the default setting.

### ZOOM

During zoom, scroll using ///.

### ANGLE

### CUSTOM PICTURE MODE

Selects the picture quality.

**STANDARD:** Displays a standard picture.

**DYNAMIC:** Produces a bold dynamic picture.

**CINEMA:** Enhances details in dark areas.

**MEMORY** →: Adjusts the picture in greater detail.

### SHARPNESS

Exaggerates the outline of the image.

1: Enhances the outline.

2: Enhances the outline more than 1.

## Items for DATA files

- ALBUM (music/photo)
- FILE (photo)
- ALBUM (video)
- FILE (video)
- DATE
- INTERVAL

Specifies the duration for which the slides are displayed on the screen.

### EFFECT

Selects the effects to be used for changing slides during a slide show.

**MODE 1:** Random

**MODE 2:** From top left

**MODE 3:** From top

**MODE 4:** From left

**MODE 5:** From the centre

GB



## MEDIA

Selects the media type you want to play.

**VIDEO:** Plays video files.

**PHOTO (MUSIC):** Plays photo and music files as a slide show when music and photo files are placed in the same album.

**PHOTO:** Plays photo files.

**MUSIC:** Plays music files. To play music with lyrics, press **SUBTITLE** while playing music files that contain MP3 ID3 Lyrics.

## CUSTOM menu



### LANGUAGE SETUP

**OSD (On-Screen Display):** Switches the display language on the screen.

**MENU:** Selects the language for the DVD VIDEO's menu. When you select "OTHERS →," select and enter a language code. "LANGUAGE CODE LIST"

**AUDIO:** Switches the language of the sound track recorded on the DVD VIDEO. When you select "ORIGINAL," the language given priority in the disc is selected.


**SUBTITLE:** Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track.



### SCREEN SETUP

**TV TYPE:** Selects the aspect ratio of the connected TV.

16:9



4:3 LETTER BOX



4:3 PAN SCAN



**COLOR SYSTEM (VIDEO CD):** Selects the colour system when you play a VIDEO CD. If your TV is the DUAL system, select "AUTO."

**SCREEN SAVER:** When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press to turn off the screen saver.

**BACKGROUND:** Selects the background colour or picture on the TV screen. If you set

"JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.



### CUSTOM SETUP

**AUTO STANDBY:** Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

**AUTO PLAY:** When set to "ON," the player automatically starts playback when the player is turned on.

**PAUSE MODE:** Selects the picture in pause mode for DVDs. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME."

**TRACK SELECTION:** Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded. If you select "AUTO," priority is given.

**MULTI-DISC RESUME:** Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS/VIDEO CDs. If you start the settings again, the resume point is cleared.



### AUDIO SETUP

**AUDIO DRC (Dynamic Range Control):** Set according the surrounding environment. Set to "TV MODE" when the smallest sounds are indiscernible, or set to "WIDE RANGE" when the listening environment is good, for example, in a home movie theatre.

**DOWNMIX:** Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels), or is recorded in Dolby Digital format. Normally select "DOLBY SURROUND."

---

# Specifications

## System

Laser: Semiconductor laser

## Inputs/Outputs

- LINE OUT L/R (AUDIO): Phono jack
- LINE OUT (VIDEO): Phono jack
- USB: USB jack Type A, maximum current 500 mA (For connecting USB device)

## General

- Power requirements: 110-240 V AC, 50/60 Hz
- Power consumption: 10 W
- Dimensions (approx.): 270 × 38.5 × 207 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 950 g
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25% to 80%

## Supplied accessories

- Audio/Video cord (1)
- Remote commander (remote) (1)
- R6 (size AA) battery (2)

Specifications and design are subject to change without notice.

---

## Playable file format

Video: MPEG-1 (Cyber-shot data)/MPEG-4 (simple profile)/Xvid

Photo: JPEG (DCF format)

Music: MP3 (except for mp3PRO)/WMA (except for WMA Pro)/AAC/LPCM/WAVE

Supported extensions: “.avi”, “.mpg”, “.mpeg”, “.mp4”, “.jpg”, “.mp3”, “.wma”, “.m4a”, “.wav”

Supported discs: DVD, DVD+RW/+R/+R DL (+VR mode), DVD-RW/-R/-R DL (VR mode/video mode), Music CD/Super VCD, CD-R/-RW

- DATA CDs recorded according to ISO 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs recorded according to UDF.

- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- The player does not play coded files such as DRM or Lossless compression.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.
- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when “PHOTO (MUSIC)” is selected.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB.
- The player may not play back the high bit rate video file on the DATA CD smoothly. You are recommended to play back using DATA DVD.

## About supported USB devices

- This player supports USB Mass Storage Class only.
- This player supports FAT formatted USB devices only (except exFAT).
- Some USB devices may not work with this player.

## Notes about USB devices

- When you remove a USB device, stop playback and disconnect it from the USB jack.
- If a USB device has a power switch, turn it on before connecting the USB device to the USB jack of the player.
- For some devices, LUN (Logical Unit Number) may appear. To change the LUN or original storage, press **II▶** **▶▶** when the list of albums or tracks is displayed.

## Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA discs created in Packet Write format cannot be played.

### Note about copy protection

Images in DVD-VR mode with CPRM protection may not be played.

### Note on DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs or VIDEO CDs.

### Note on discs

This unit is designed to play back discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

### Note about the discs

Do not use the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.

---

## Playing VIDEO CDs with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC, press **◀◀/▶▶** or the number buttons while the player is stopped to select a track, then press **▶** or ENTER. To return to PBC playback, press **■** twice, then press **▶**.

---

## Controlling TVs with the remote

While holding down TV **I/C**, press the number buttons to select your TV's manufacturer's code.

Sony 01	Panasonic 17, 49
Goldstar 76	Philips 06, 08, 72
Hitachi 24	Samsung 71
JVC 33	Sharp 29
LG 76	Toshiba 38

---

## Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

### The power is not turned on.

→ Check that the power cord (mains lead) is connected securely.

### There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Switch the player's colour system to match the colour system of the TV (NTSC or PAL). First turn off the player by pressing **I/C**. Next press DISPLAY, enter "0" using the number button, and then press **I/C** on the remote.

### There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

### The remote does not function.

- The battery in the remote is weak.
- The remote is not pointed at the remote sensor **■** on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

### The disc does not play.

- The disc is turned over. Insert the disc with the playback side facing down.
- The disc is skewed.
- The disc is dirty or flawed.
- The player cannot play certain discs.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player.
- The player cannot play a recorded disc that is not correctly finalized.

### The player does not operate properly.

- When static electricity, etc., causes the player to operate abnormally, unplug the player.

**“C:13:” appears on the screen.**

→ Clean the disc with a cleaning cloth or check its format.

**The player does not detect a USB device connected to the player.**

→ The USB device is not securely connected to the player.

→ The USB device or a cord is damaged.

→ Disc mode has not been switched to USB mode.







"C:13" در نمایشگر ظاهر می شود.

← با پارچه تمیزکننده دیسک را تمیز کنید یا فرمت آن را بررسی کنید.

پخش کننده دستگاه **USB** متصل را شناسایی نمی کند.

← دستگاه USB محکم به پخش کننده وصل نشده است.

← دستگاه USB یا سیم صدمه دیده است.

← حالت دیسک به حالت USB عوض نشده است.

## عیب یابی

در صورتی که هنگام استفاده از پخش کننده به مشکلات زیر برخوردید، برای رفع مشکل قبل از درخواست تعمیر از راهنمای عیب یابی استفاده کنید. اگر مشکل همچنان باقی ماند، به نزدیک ترین فروشنده Sony مراجعه کنید.

**دستگاه روشن نمی شود.**

← بررسی کنید که سیم برق محکم وصل شده است.

**تصویر یا نویز تصویر ظاهر نمی شود.**

← سیم برق را محکم وصل کنید.

← سیم های اتصال صدمه دیده اند.

← اتصال به تلویزیون را بررسی کرده و انتخابگر ورودی

روی تلویزیون را روشن کنید تا سیگنال پخش کننده در

صفحه تلویزیون ظاهر شود.

← سیستم رنگ پخش کننده را تغییر دهید تا با سیستم رنگ

تلویزیون مطابقت داشته باشد (PAL یا NTSC). ابتدا

با فشار دادن  $\text{I/}$  پخش کننده را خاموش کنید. سپس

DISPLAY را فشار دهید، با استفاده از دکمه عددی

"0" را وارد کرده و بعد  $\text{I/}$  روی کنترل از راه دور را

فشار دهید.

**صدا پخش نمی شود.**

← سیم برق را محکم وصل کنید.

← سیم اتصال صدمه دیده است.

← پخش کننده در حالت توقف موقت یا حالت پخش با

حرکت آهسته است.

← پخش کننده در حالت جلو رفتن یا عقب رفتن سریع است.

**کنترل از راه دور کار نمی کند.**

← باتری کنترل از راه دور ضعیف است.

← کنترل از راه دور به سمت حسگر کنترل راه دور  $\text{R}$  روی

پخش کننده نیست.

← وقتی پخش کننده را با به ترتیب فشار دادن دکمه های

روی کنترل از راه دور به کار می اندازید، هر دکمه را با

فاصله 5 ثانیه از هم فشار دهید.

**دیسک پخش نمی شود.**

← دیسک وارونه است. دیسک را طوری قرار دهید که طرف

پخش به سمت پایین باشد.

← دیسک کج شده است.

← دیسک کثیف یا مخدوش است.

← پخش کننده بعضی دیسک ها را پخش نمی کند.

← کد منطقه روی DVD با پخش کننده مطابقت ندارد.

← در داخل پخش کننده عرق کرده است.

← پخش کننده نمی تواند دیسک ضبط شده ای که درست

فاینلایز نشده را پخش کند.

**پخش کننده درست کار نمی کند.**

← وقتی الکتریسیته ساکن و مواردی از این قبیل مانع درست کار

کردن پخش کننده می شود، پخش کننده را از برق بکشید.

## نکاتی درباره DVD ها و VIDEO CD ها

برخی عملکردهای پخش DVD ها و VIDEO CD ها ممکن است به طور عمد توسط تولیدکنندگان نرم افزار تنظیم شود. از آنجا که این پخش کننده DVD ها و VIDEO CD ها را طبق محتوای دیسک طراحی شده توسط تولیدکنندگان نرم افزار پخش می کند، ممکن است بعضی ویژگی های پخش درد دسترس نباشد. همچنین، به دستورالعمل های ارائه شده با DVD یا VIDEO CD مراجعه کنید.

## نکاتی درباره دیسک ها

این دستگاه برای پخش دیسک های مطابق با استاندارد دیسک فشرده (CD) طراحی شده است. DualDisc ها و برخی دیسک های موسیقی کدگذاری شده با فن آوری های محافظت در برابر کپی با استاندارد دیسک فشرده (CD) مطابقت ندارند. بنابراین، ممکن است این دیسک ها با این دستگاه سازگار نباشند.

## نکاتی درباره دیسکها

از دیسکهای زیر استفاده نکنید:

- دیسکی که دارای شکل استاندارد نباشد (مانند، کارت، قلم).

- دیسکی که دارای مارک چسبیده شده یا برچسب باشد.

## پخش VIDEO CD ها با عملکرد PBC

وقتی با عملکردهای PBC (کنترل پخش) شروع به پخش یک VIDEO CD می کنید، منو جهت انتخاب ظاهر می شود.

برای پخش بدون استفاده از PBC،  $\text{PBC}$  یا  $\text{PBC}$  دکمه

های عددی را در حین توقف پخش کننده فشار دهید

یا یک ترانه را انتخاب کرده و سپس  $\text{ENTER}$  یا  $\text{ENTER}$

را فشار دهید. برای بازگشت به پخش PBC، دوبار  $\text{PBC}$

سپس  $\text{PBC}$  را فشار دهید.

## کنترل تلویزیون با کنترل از راه دور

در حالی که  $\text{TV}$  یا  $\text{TV}$  را پایین نگه داشته اید، برای انتخاب کد سازنده تلویزیون، دکمه های عددی را فشار دهید.

01 Sony	49.17 Panasonic
76 Goldstar	72.08.06 Philips
24 Hitachi	71 Samsung
33 JVC	29 Sharp
76 LG	38 Toshiba

### سیستم

لیزر: لیزر نیمه رسانا

### ورودی ها/خروجی ها

- پخش کننده همه فایل های بالا را پخش می کند حتی اگر فرمت فایل متفاوت باشد. پخش این داده ها ممکن است باعث ایجاد نویز شود که در نتیجه منجر به خراب شدن بلندگو می شود.
  - پخش پوشه ها با سلسله مراتب پیچیده ممکن است مدتی طول بکشد. آلبوم ها را حدکثر با دو سلسله مراتب ایجاد کنید.
  - پخش کننده نمی تواند فایل های کد دار مانند DRM یا فشرده سازی Lossless را پخش کند.
  - ممکن است بعضی فایل های ویدئو، عکس و موسیقی بسته به شرایط کدگذاری/کدگشایی پخش نشوند.
  - پخش کننده حدکثر تا 200 آلبوم و 600 فایل تشخیص می دهد. در صورت انتخاب "عکس (موسیقی)"، حدکثر تا 300 فایل موسیقی و 300 فایل عکس تشخیص می دهد.
  - پخش کننده نمی تواند فایل ویدئویی بزرگتر از 720 (عرض) × 576 (طول) / 2 گیگابایت را پخش کند.
  - ممکن است پخش کننده فایل ویدئویی با سرعت بالا روی DATA CD را یکنواخت پخش نکند. توصیه می شود با استفاده از DATA DVD پخش کنید.
- LINE OUT L/R (AUDIO): فیش تلفن  
• LINE OUT (VIDEO): فیش تلفن  
• USB: فیش USB نوع A، جریان حدکثر 500 میلی آمپر (برای اتصال دستگاه USB)

### عمومی

- ملزومات برق: 110 - 240 ولت برق متناوب، 50/60 هرتز
- مصرف انرژی: 10 وات
- ابعاد (تقریبی): 270 × 38.5 × 207 میلی متر (عرض/ارتفاع/طول) شامل قطعات بیرون زده
- جرم (تقریبی): 950 گرم
- دمای عملکرد: 5 تا 35 درجه سانتی گراد
- رطوبت عملکرد: 25% تا 80%

### لوازم جانبی ارائه شده

- سیم صدا/تصویر (1)
  - دستگاه کنترل راه دور (راه دور) (1)
  - باتری R6 (سایز AA) (2)
- طراحی و مشخصات ممکن است بدون اطلاع تغییر کند.

### درباره دستگاه های پشتیبانی شده USB

- این پخش کننده فقط از کلاس ذخیره انبوه USB پشتیبانی می کند.
- این پخش کننده فقط از دستگاه های USB که با قالب FAT فرمت شده اند، پشتیبانی می کند (بجز exFAT).
- ممکن است برخی دستگاه های USB با این پخش کننده کار نکنند.

### نکاتی درباره دستگاه های USB

- هنگامی که یک دستگاه USB را جدا می کنید، پخش را متوقف کرده و آن را از فیش USB جدا کنید.
- اگر یک دستگاه USB دارای سویچ روشن/خاموش است، قبل از اتصال دستگاه USB به فیش USB پخش کنند، آن را روشن کنید.
- در برخی دستگاه ها، ممکن است LUN (شماره واحد منطقی) ظاهر شود. برای تغییر دادن LUN یا مکان ذخیره اصلی، وقتی لیست آلبوم ها یا آهنگ ها نمایش داده شد، ►► را فشار دهید.

### نکاتی درباره رسانه قابل ضبط

- به دلیل کیفیت ضبط یا شرایط فیزیکی دیسک یا ویژگیهای دستگاه ضبط و نرم افزار مؤلف، بعضی رسانه های قابل ضبط را نمی توان روی این پخش کننده پخش کرد. اگر دیسک درست فاینالایز نشده باشد پخش نمی شود. همچنین برخی دیسک های داده ایجاد شده در فرمت Packet Write پخش نمی شوند.

### نکاتی درباره محافظت در برابر کپی

- تصاویر در حالت DVD-VR با محافظت CPRM پخش نمی شوند.

### فرمت فایل قابل پخش

- ویدئو: MPEG-1 (داده Cyber-shot)/MPEG-4 (نمایه آسان)/Xvid
- عکس: JPEG (فرمت DCF)
- موسیقی: MP3 (بجز WMA/mp3PRO)
- (بجز WAVE/LPCM/AAC/(WMA Pro))
- پسوند های پشتیبانی شده: ".avi"، ".mpg"، ".mpeg"، ".mp4"، ".jpg"، ".mp3"، ".wma"، ".wav"، ".m4a"
- دیسک های پشتیبانی شده: DVD+RW/+R/+R، DVD DL (حالت VR+) / DL (حالت VR) / حالت ویدئو، Music CD/Super VCD، CD-R/-RW
- DATA CD ضبط شده مطابق با سطح 1 و 2 ISO 9660 یا فرمت توسعه یافته آن، Joliet.
- DATA DVD ضبط شده براساس UDF.

نوع رسانه مورد نظر را جهت پخش انتخاب می کند.

ویدیو: فایل های ویدیویی را پخش می کند.

عکس (موسیقی): هنگامی که فایل های موسیقی و عکس در یک آلبوم مشابه قرار گرفته اند، فایل های موسیقی و عکس را پخش می کند.

عکس: فایل های عکس را پخش می کند.

موسیقی: فایل های موسیقی را پخش می کند. برای پخش موسیقی یا متن آهنگ، SUBTITLE را در حین پخش فایل های موسیقی که حاوی ترانه MP3 ID3 هستند، فشار دهید.

محافظ صفحه نمایش: اگر روی "روشن" تنظیم شده باشد، وقتی پخش کننده به مدت 15 دقیقه در حالت توقف یا توقف موقت باشد محافظ صفحه نمایش ظاهر می شود. برای خاموش کردن محافظ صفحه نمایش، ▶ را فشار دهید. پس زمینه: رنگ پس زمینه یا عکس روی صفحه تلویزیون را انتخاب می کند. اگر "عکس جلد سی دی" را تنظیم کرده باشید، علیرغم اینکه دیسک حاوی عکس جلد سی دی نباشد، عکس "گرافیک" ظاهر می شود.

### تنظیمات دلخواه



حالت انتظار خودکار: حالت انتظار خودکار را روی روشن یا خاموش تنظیم می کند. در صورت انتخاب "روشن"، اگر پخش کننده بیش از 30 دقیقه در حالت توقف بماند، به حالت انتظار می رود.

اجرای اتوماتیک: هنگامی که روی "روشن" تنظیم شده است، پخش کننده به صورت خودکار پخش را در هنگام روشن بودن، شروع می کند.

حالت توقف موقت: تصویر را در حالت مکث برای DVD ها انتخاب می کند. به طور معمول "اتوماتیک" را انتخاب می کند. وقتی وضوح خروجی عکس عالی است، روی "فریم" تنظیم کنید.

انتخاب آهنگ: هنگام پخش DVD VIDEO که چند فرمت صوتی (PCM، صدای DTS، MPEG یا فرمت Dolby Digital) روی آن ضبط شده، اولویت را به آهنگ صوتی با بیشترین تعداد کانال می دهد. در صورت انتخاب "اتوماتیک"، الویت داده می شود.

بازگشت چند دیسک: تنظیمات بازگشت چند دیسک را روشن یا خاموش می کند. پخش بازگشت را می توان حداکثر برای DVD VIDEO/VIDEO CD 6 در حافظه ذخیره کرد. اگر دوباره تنظیمات را شروع کنید، نقطه بازگشت پاک می شود.

### تنظیمات صدا



صدای DRX (کنترل دامنه دینامیک): براساس محیط اطراف تنظیم کنید. وقتی کوچک ترین صداها قابل تشخیص نیستند، روی "حالت تلویزیون" تنظیم کنید یا وقتی محیط برای شنیدن خوب است، برای مثال در سالن سینمای خانوادگی روی "WIDE RANGE" تنظیم کنید.

ترکیب اولیه: هنگام پخش یک DVD حاوی المنت های صدای عقب (کانال ها)، یا ضبط شده در فرمت Dolby Digital، روش ترکیب اولیه را به 2 کانال عوض می کند. به طور معمول "صدای فراگیر دالبی" را انتخاب کنید.

## منوی انتخابی



### تنظیمات زبان

OSD (نمایش روی صفحه): زبان نمایش روی صفحه را عوض می کند.

منو: زبان را برای منوی DVD VIDEO انتخاب می کند. در صورت انتخاب "→ سایر موارد"، یک کد زبان انتخاب و وارد کنید. "LANGUAGE CODE LIST" صدا: زبان ترانه صوتی ضبط شده بر روی DVD VIDEO را تغییر می دهد. در صورت انتخاب "اصلی"، زبان ترجیحی دیسک انتخاب می شود.

زیرنویس: زبان زیرنویس ضبط شده روی DVD VIDEO را عوض می کند. در صورت انتخاب "تنظیمات صدا بر اساس زیرنویس"، زبان زیرنویس بر طبق زبانی که براساس زبانی که برای آهنگ صوتی انتخاب کرده اید، تغییر می یابد.

### تنظیمات صفحه



نوع تلویزیون: نسبت اندازه تصویر تلویزیون متصل را انتخاب می کند.



16 به 9



کادر 4 به 3




پن اسکن 4 به 3

سیستم رنگ (VIDEO CD): هنگام پخش VIDEO CD، سیستم رنگ را انتخاب می کند. اگر تلویزیون شما در سیستم DUAL است، "اتوماتیک" را انتخاب کنید.

## نمایش منوی کنترل

### DISPLAY را فشار دهید.

برای تغییر نمایش منوی کنترل، دوباره DISPLAY را فشار دهید. بسته به دیسک/فایل یا موقعیت موجود، موارد موجود متفاوت هستند.

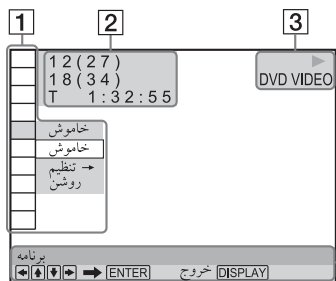

1 موارد منوی کنترل: "لیست منو"

گزینه های مورد انتخابی

2 تعداد عناوین

تعداد بخش ها

زمان پخش

3 وضعیت پخش

نوع رسانه

4 مورد انتخابی منوی کنترل

پیام عملیات

→ پخش کننده: رمز عبور 4 رقمی خود را وارد کرده و سپس ENTER را فشار دهید. سطح را در "سطح" انتخاب کنید. هرچه مقدار کمتر باشد، محدودیت بیشتر است. یک منطقه را در "استاندارد" انتخاب کنید. هنگامی که "→ سایر موارد" را انتخاب می کنید، کد استاندارد را انتخاب کرده و آن را وارد کنید. "PARENTAL CONTROL AREA CODE LIST" → رمز: یک رمز عبور 4 رقمی وارد کنید. در صورت فراموش کردن رمز خود، "199703" را در کادر رمز وارد کرده، ENTER را فشار دهید و سپس یک رمز 4 رقمی جدید وارد کنید.

### تنظیم

هنگامی که پخش کننده در حالت توقف است، می توانید تنظیمات مختلفی را انجام دهید.

سریع: انجام تنظیمات اصلی

انتخابی: "منوی انتخابی"

تنظیم مجدد: تنظیمات را در "تنظیم" به تنظیمات پیش فرض باز می گرداند.

### بزرگ نمایی (زوم)

در حین زوم کردن، با استفاده از ←/↑/↓/→ جابجا شوید.

### زاویه

### حالت عکس انتخابی

کیفیت تصویر را انتخاب کنید.

استاندارد: یک عکس استاندارد نمایش می دهد.

دینامیک: تصویری پویا و برجسته را ایجاد می کند.

سینما: جزئیات را در مکان های تاریک بهبود می بخشد.

→ حافظه: عکس را با جزئیات بیشتر تنظیم می کند.

### وضوح

خطوط بیرونی تصویر را با دقت بیشتری نشان می دهد.

1: خطوط بیرونی را تقویت می کند.

2: خطوط بیرونی را بیش از 1 تقویت می کند.

### مواردی برای فایل های DATA

آلبوم (موسیقی/عکس)

فایل (عکس)

آلبوم (فیلم)

فایل (فیلم)

تاریخ

وقفه

مدت زمان نمایش اسلایدها روی صفحه را مشخص می کند.

### نحوه نمایش تصاویر

جلوه های مورد نظر جهت تغییر دادن اسلایدها در طی

نمایش اسلاید را انتخاب می کند.

حالت 1: بدون ترتیب

حالت 2: از بالا سمت چپ

حالت 3: از بالا

حالت 4: از سمت چپ

حالت 5: از مرکز

## لیست منو

عنوان/صحنه/آهنگ

بخش/فهرست

آهنگ

زمان/نوشتار

دیسک/USB

منوی بالا/منو

اصلی/لیست پخش

برنامه

→ تنظیم، را انتخاب کرده سپس ENTER را فشار داده و

عنوان (T)، بخش (C) یا آهنگ (T) مورد نظر را جهت برنامه ریزی

انتخاب کنید و ENTER را فشار دهید. ▶ را فشار دهید.

انتخاب نامنظم (SHUFFLE)

تکرار

تکرار A-B

→ تنظیم، را انتخاب کرده و سپس ENTER را فشار

دهید. نقطه A و B را با فشردن ENTER انتخاب کنید.

کنترل والدین (قفل کودک)

پخش برخی از DVD VIDEO ها را می توان بر اساس سطح از قبل

تعین شده از جمله سن کاربران محدود کرد. ممکن است صحنه ها

مسدود شده یا با صحنه های دیگر تعویض شود.

#### مجوز نرم افزار

- ساخته شده تحت مجوز لایبر اتوار دالبی. دالبی و نشان double-D نامهای تجاری تابع لایبر اتوار دالبی می باشند.
- "DVD Logo" یک مارک تجاری DVD Format/Logo Licensing Corporation است.
- تکنولوژی کدگذاری صوتی MPEG Layer-3 و دارای مجوز ثبت شده از Thomson و Fraunhofer IIS است.
- Windows Media یک مارک تجاری ثبت شده با مارک تجاری Microsoft Corporation در ایالات متحده و/یا سایر کشورهاست.
- این محصول دارای فن آوری هایست که ممکن است حقوق معنوی Microsoft باشند.
- استفاده یا توزیع این فن آوری خارج از این محصول بدون کسب مجوز مناسب از Microsoft ممنوع است.
- دیگر علائم تجاری متعلق به صاحبان آنها می باشد.
- این محصول تحت گو اهیمنامه به ثبت رسیده MPEG-4 VISUAL جهت استفاده شخصی و غیر تجاری مصرف کننده برای دیدن کردن ویدئو به روشی سازگار با MPEG-4 VISUAL استاندارد ("MPEG-4 VIDEO") می باشد که توسط مصرف کننده با مضمون شخصی یا غیر تجاری کدگذاری شده و/یا از یک تولید کننده مجاز ویدئو توسط MPEG LA برای تولید MPEG-4 VIDEO بدست آمده است. هیچ نوع مجوز دیگری برای سایر استفاده هاگاری نمی شود و کاربردی ندارد. اطلاعات بیشتر شامل فروش، مصارف داخلی و تجاری و اخذ مجوز را می توان از طریق MPEG LA، LCC بدست آورد. به سایت <http://www.mpegla.com> مراجعه نمایید.

برای کاهش دادن خطر آتش سوزی یا برق گرفتگی، این دستگاه را در مقابل چکیدن یا پاشش مایعات قرار ندهید. اشیاء دارای مایعات مانند گلدان را روی دستگاه قرار ندهید. برای جلوگیری از برق گرفتگی، دستگاه را باز نکنید. این کار را به افراد کارآزموده واگذار نمائید.

سیم برق بایستی از سوی سرویسکار معتبر تعویض شود. باتری ها یا دستگاه هایی که داخل آنها باتری است را نباید در برابر گرمای زیاد مانند نور خورشید و آتش قرار داد.

#### احتیاط

تجهیزات نوری بکار رفته در این دستگاه به چشمان شما آسیب می رساند. از آنجائیکه اشعه لیزر استفاده شده در این دستگاه CD/DVD برای چشم مضر است، دستگاه را باز نکنید. این کار را به افراد کارآزموده واگذار نمائید.


#### احتیاطهای لازم

- دستگاه تا زمانیکه به پرز برق وصل باشد هنوز از منبع نیرو AC (برق) جدا نشده است، حتی اگر دستگاه خاموش شده باشد.
- این دستگاه پخش را در فضایی کوچک، مانند قفسه کتاب یا مکانهایی مشابه قرار ندهید.
- دستگاه پخش را در نزدیکی پرز برق قرار دهید تا در مواقع اضطراری بتوان سیم برق AC (سیم اصلی) را با سرعت از پرز کشید.
- اگر دستگاه مستقیماً از یک محیط سرد به محیطی گرم برده شود، یا در اطراف با رطوبت بالا قرار داده شود، رطوبت بر روی لنزهای داخل دستگاه جمع می شود. اگر این عمل اتفاق افتد، دستگاه به درستی عمل نخواهد کرد. در این حالت، دیسک را خارج کرده و دستگاه را برای حدود نیم ساعت روشن بگذارید تا رطوبت آن تبخیر شود.

#### رعد و برق

به منظور محافظت بیشتر از این دستگاه در هنگام رعد و برق، یا وقتی برای مدت طولانی نمی خواهید از آن استفاده کنید، آن را از پرز بکشید. با این کار از آسیبهایی ناشی از رعد و برق و نوسانات برق جلوگیری می شود.

#### رمز منطقه

یک کد منطقه در پشت دستگاه پخش کننده وجود دارد و فقط DVD های موجود در بازار که دارای کد منطقه مشابه یا  هستند را پخش می کند.

## LANGUAGE CODE LIST

1027	Afar	1181	Frisian	1345	Malagasy	1507	Samoan
1028	Abkhazian	1183	Irish	1347	Maori	1508	Shona
1032	Afrikaans	1186	Scots Gaelic	1349	Macedonian	1509	Somali
1039	Amharic	1194	Galician	1350	Malayalam	1511	Albanian
1044	Arabic	1196	Guarani	1352	Mongolian	1512	Serbian
1045	Assamese	1203	Gujarati	1353	Moldavian	1513	Siswati
1051	Aymara	1209	Hausa	1356	Marathi	1514	Sesotho
1052	Azerbaijani	1217	Hindi	1357	Malay	1515	Sundanese
1053	Bashkir	1226	Croatian	1358	Maltese	1516	Swedish
1057	Byelorussian	1229	Hungarian	1363	Burmese	1517	Swahili
1059	Bulgarian	1233	Armenian	1365	Nauru	1521	Tamil
1060	Bihari	1235	Gujarati	1369	Nepali	1525	Telugu
1061	Bislama	1239	Interlingue	1376	Dutch	1527	Tajik
1066	Bengali;	1245	Inupiak	1379	Norwegian	1528	Thai
	Bangla	1248	Indonesian	1393	Occitan	1529	Tigrinya
1067	Tibetan	1253	Icelandic	1403	(Afan)Oromo	1531	Turkmen
1070	Breton	1254	Italian	1408	Oriya	1532	Tagalog
1079	Catalan	1257	Hebrew	1417	Punjabi	1534	Setswana
1093	Corsican	1261	Japanese	1428	Polish	1535	Tonga
1097	Czech	1269	Yiddish	1435	Pashto; Pushto	1538	Turkish
1103	Welsh	1283	Javanese	1436	Portuguese	1539	Tsonga
1105	Danish	1287	Georgian	1463	Quechua	1540	Tatar
1109	German	1297	Kazakh	1481	Rhaeto-	1543	Twì
1130	Bhutani	1298	Greenlandic		Romance	1557	Ukrainian
1142	Greek	1299	Cambodian	1482	Kirundi	1564	Urdu
1144	English	1300	Kannada	1483	Romanian	1572	Uzbek
1145	Esperanto	1301	Korean	1489	Russian	1581	Vietnamese
1149	Spanish	1305	Kashmiri	1491	Kinyarwanda	1587	Volapük
1150	Estonian	1307	Kurdish	1495	Sanskrit	1613	Wolof
1151	Basque	1311	Kirghiz	1498	Sindhi	1632	Xhosa
1157	Persian	1313	Latin	1501	Sangho	1665	Yoruba
1165	Finnish	1326	Lingala	1502	Serbo-Croatian	1684	Chinese
1166	Fiji	1327	Laothian	1503	Singhalese	1697	Zulu
1171	Faroese	1332	Lithuanian	1505	Slovak	1703	Not specified
1174	French	1334	Latvian; Lettish	1506	Slovenian		

ISO 639: 1988 (E/F) standard

## PARENTAL CONTROL AREA CODE LIST

2044	Argentina	2165	Finland	2362	Mexico	2149	Spain
2047	Australia	2174	France	2376	Netherlands	2499	Sweden
2046	Austria	2109	Germany	2390	New Zealand	2086	Switzerland
2057	Belgium	2248	India	2379	Norway	2528	Thailand
2070	Brazil	2238	Indonesia	2427	Pakistan	2184	United Kingdom
2079	Canada	2254	Italy	2424	Philippines		
2090	Chile	2276	Japan	2436	Portugal		
2092	China	2304	Korea	2489	Russia		
2115	Denmark	2363	Malaysia	2501	Singapore		



\* 1 - 4 5 6 6 3 3 8 5 1 9 \*

4-566-338-51(1)